

FRAME ASSEMBLY

STEP 1: LOWER SECTION

PARTS REQUIRED: 2-TC1, 2-BC4, 2-B1, 2-S2, 1-S3

- Attach the base B1 to part BC4 by using the locking pin
- Follow the number sequence
- Connect corner TC1 to BC4
- Connect S2 to TC1
- Connect S3 to S2
- Connect S2 to S3
- Connect TC1 to S2
- Connect BC4 with Base to TC1

STEP 2:


PARTS REQUIRED: 2-C1, 2-C2,

- Take Lower Section from STEP 1
- Follow the number sequence
- Connect C1 to BC4
- Connect C2 to C1
- Repeat to complete other side

STEP 3:

PARTS REQUIRED: 2-TC1, 2-S2, 1-S3, 2-C1

- Follow the number sequence
- Connect C1 to C2
- Connect TC1 to C2
- Connect S2 to TC1
- Connect S3 to S2
- Connect S2 to S3
- Connect TC1 to S2
- Connect C1 to TC1
- Connect C1 to C2
- Attach the completed upper section to the lower section to complete the frame

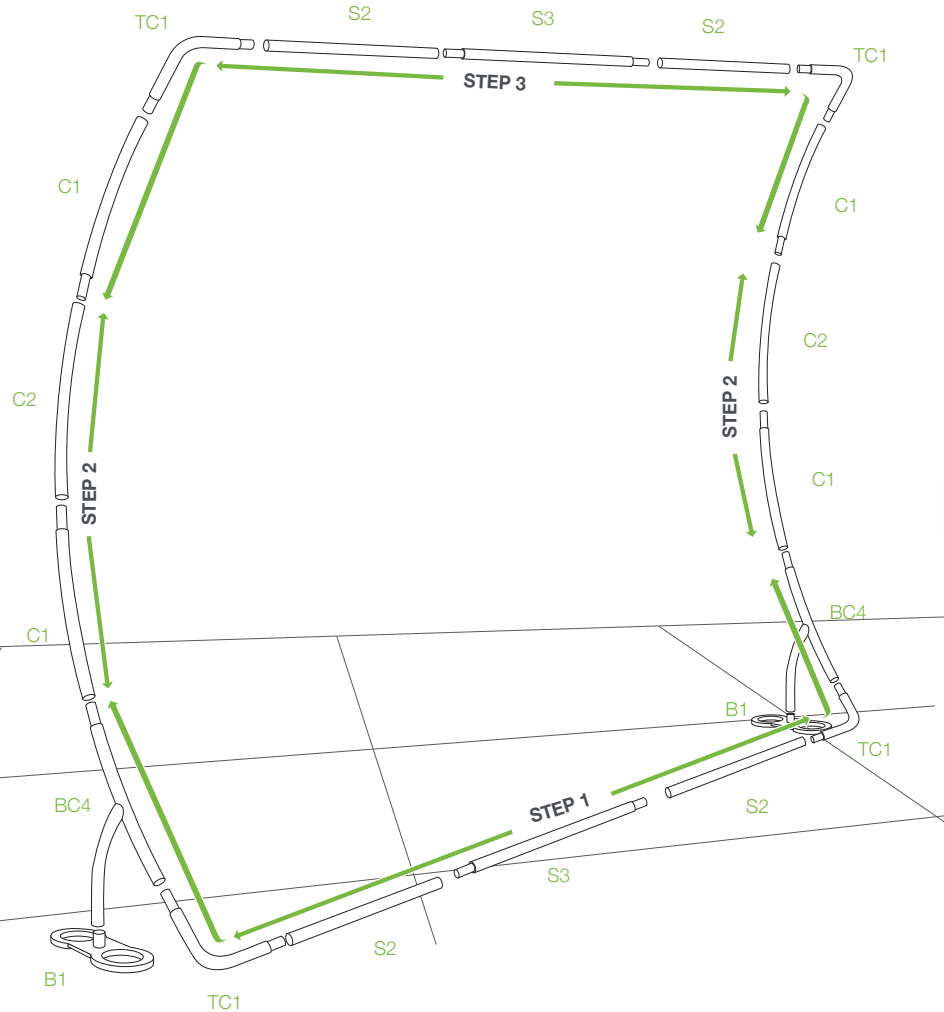

PARTS	CODE	QTY
	TC1	4
	S2	4
	S3	2
	C1	4
	C2	2
	BC4	2
	B1	2

FABRIC INSTALLATION

- Make sure that floor is clean. If possible use a drop cloth. Lay frame on the floor
- Locate the opening on the fabric
- Make sure that zipper is open
- Drape fabric like a pillow cover to the frame starting at the top
- Pull the fabric part way down and stand frame up
- Pull fabric completely down and close zipper

