

## FRAME ASSEMBLY

### STEP 1: LOWER SECTION

**PARTS REQUIRED:** 2-BC1, 1-BC2, 2-B1, 2-C2, 2-C5

- Attach the base B1 to part BC1 by using the locking pin
- Follow the number sequence
- Connect C5 to BC1
- Connect C2 to C5
- Connect BC2 to C2
- Connect C2 to BC2
- Connect C5 to C2
- Connect BC1 to C5
- Connect BC1 with Base to S2

### STEP 2:


**PARTS REQUIRED:** 3-S2, 3-S3,

- Take Lower Section from STEP 1
- Follow the number sequence
- Connect S2 to BC1
- Connect S3 to S2
- Repeat to complete other side
- Connect S2 to BC2
- Connect S3 to S2

### STEP 3:

**PARTS REQUIRED:** 2-TC1, 1-TC2, 2-C2, 2-C5, 3-S2

- Follow the number sequence
- Connect S2 to TC1
- Connect TC1 to C5
- Connect C2 to C5
- Connect TC2 to C2
- Connect C2 to TC2
- Connect C5 to C2
- Connect TC1 to C2
- Connect S2 to TC1
- Attach the completed upper section to the lower section to complete the frame

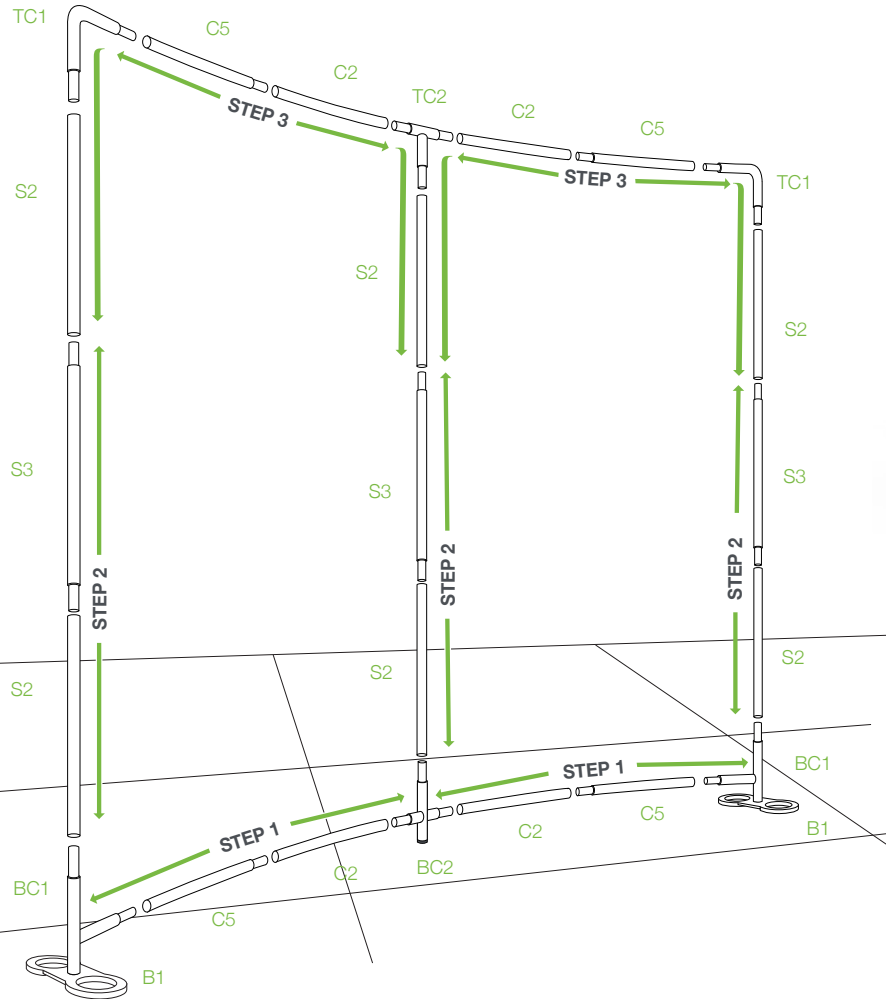

PARTS	CODE	QTY
	TC1	2
	TC2	1
	S2	6
	S3	3
	C5	4
	C2	4
	BC1	2
	BC2	1
	B1	2

## FABRIC INSTALLATION

- Make sure that floor is clean. If possible use a drop cloth. Lay frame on the floor
- Locate the opening on the fabric
- Make sure that zipper is open
- Drape fabric like a pillow cover to the frame starting at the top
- Pull the fabric part way down and stand frame up
- Pull fabric completely down and close zipper

